


Panic Button Remote

General Information

The Panic Button Remote (2GIG-PANIC100-345) is a compact, battery powered, wireless panic button that transmits an Emergency signal from any location within 345MHz frequency (RF) range of the 2GIG® control panel. The Emergency signal can be transmitted to the control panel, whether the security system is armed or disarmed.

Users can mount the panic button in a convenient location in the wall or use one of these wearable options: lanyard, wristband, belt clip, and car visor clip. It is water-resistant and also offers a five (5)-second button lockout.

Figure 1 Panic Button Remote

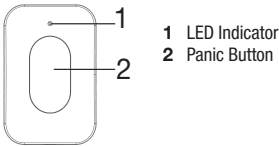


Box Contents

Verify that the package includes the following:

- (1) Panic Button Remote
- (1) Battery
- (1) Lanyard (A)
- (1) Car-Visor Clip (D)
- (1) Belt Clip (C)
- (1) Wrist Band (E)
- (1) Sensor (B) for clips (belts and visor) with option to wall mount using two (2) screws (not included)

Figure 2 Panic Button Remote — Wearable Options

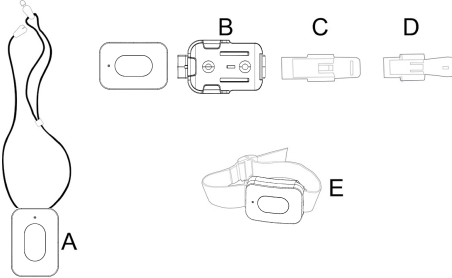

Inserting and Replacing the Batteries

WARNING: Maintain the battery strength in the Panic Button to ensure emergency use when needed. It's recommended that the battery be checked/replaced regularly, at least one or more times per year. Under typical conditions, the battery life is approximately three (3) years. When the battery is low, the control panel's Home screen will display a trouble notification. To help to ensure that the panic button is available during a duress event, always replace the battery when the low battery notification first appears.

WARNING: Always use the recommended replacement batteries and ensure that it is new, in good condition, and fully charged. See "Specifications" on page 2.

- 1 Insert a small, flathead screwdriver into the opening on the panic button. Then remove the top cover.


Figure 3 Removing the Top Cover



- 2 Gently insert the flathead screwdriver between the battery and one of the metal clips in the battery compartment, then remove the old battery.

Figure 4
Battery Compartment

- A** Battery
- B** Metal Clips
- C** Battery Compartment

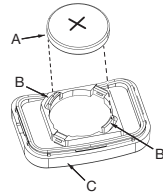

IMPORTANT: Dispose of or recycle used batteries per local hazardous waste regulations. Additional city, state or national requirements may apply.

- 3 Insert the replacement battery with the positive (+) sign facing up.
- 4 If you remove the circuit board (not recommended), ensure the LED aligns with the appropriate hole on the top cover.
- 5 Verify that the panic button is programmed into the control panel and ensure that it has quality radio frequency (RF) communications with the panel.

NOTE: Consult the Control Panel Installation & Programming Guide for wireless sensor programming.

- 6 Replace the panic button's top cover.

WARNING: Failure to follow these warnings and instructions can lead to heat generation, rupture, leakage, explosion, fire, or other injury or damage. Do not insert the battery into the compartment in the wrong direction. Always replace the battery with the same or equivalent type (see **Specifications**).

Never recharge or disassemble the battery. Never place the battery in fire or water. Always keep batteries away from small children. If batteries are swallowed, promptly see a doctor.

WARNING: After replacing the battery, always test the panic button. For testing information, see the Control Panel's Installation & Programming Guide.

Encrypted/Unencrypted Mode Switch

The device is capable of transmitting signals in encrypted or non-encrypted mode, which is set through a button-press sequence. The sensor comes with default set to non-encrypted mode. To change to encrypted mode, do the following:

- 1 Open the device housing and remove the battery. Wait for 10 seconds.
- 2 Reassemble the panic button housing.
- 3 To change the mode, quickly press the button five times within five seconds. The device red LED flashes three times to acknowledge the device is in switching mode.
- 4 Press and hold the button for five seconds until the red LED begins flashing again.
 - 2 flashes: Encrypted mode. 4 flashes: Non-encrypted mode.

Activating the Panic Button Remote

To activate the panic button:

- 1 Press and hold the panic button for about two seconds. When the LED turns RED, a signal is transmitted to the control panel.
- 2 When the control panel alarm sounds and the System in Alarm message displays, enter your code to silence the alarm. Any valid user code will silence the alarm. An alarm report is transmitted to the monitoring service. To acknowledge that the alarm report was sent, tap **OK**.
- 3 If you want to clear the alarm history on the control panel, tap **Clear Alarm History** to place a checkmark in the corresponding box, then tap **OK**.

Specifications

Wireless Signal Range	500 ft (152.4 m), open air, with 2GIG Control Panel
Code Outputs	Alarm; Supervisory; Low Battery
Transmitter Frequency	345.000 MHz (crystal controlled)
Unique ID Codes	Over one (1) million different code combinations
Supervisory Interval	70 minutes
LED	RED when activated
Dimensions (L x W x H)	1.65 x 1.20 x 0.50 in. (4.19 x 3.05 x 1.27 cm)
Weight (including battery and bracket)	0.45 oz. (12.8 g)
Housing Material	ABS Plastic
Color	White with Grey Button
Operating temperature	32° to 120° F (0° to 49° C)
Relative Humidity	Water-Resistant
Battery (included, not installed)	One (1) Panasonic CR 2032 or equivalent Lithium Battery
Regulatory Listings	ETL, FCC and IC
Equipment Code	2868 (encrypted), 0868 (unencrypted)
Panel Programming Sensor Loop	Loop 1

⚠ WARNING ⚠

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
 - **DEATH** or serious injury can occur if ingested.
 - A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
 - **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
 - Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.
-
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
 - Do NOT dispose of batteries in household trash or incinerate.
 - Even used batteries may cause severe injury or death.
 - Call a local poison control center for treatment information.
 - Only use this product with CR2025 type batteries.
 - Nominal battery voltage 3Vdc.
 - This product uses non-rechargeable batteries and are not to be recharged.
 - Do not force discharge, recharge, disassemble, incinerate or heat above specified operational temperature. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
 - Ensure the batteries are installed correctly according to polarity (+ and -).
 - Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
 - Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
 - Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Regulatory Information

FCC and IC Notice

This device complies with Part 15 of the FCC's Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) The device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction. Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed.

IC: Radiation Exposure Statement

The product complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

CAUTION: Any changed or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

WARNING

Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

* For more warranty and compliance information, visit www.2gig.com

LIMITED WARRANTY

This Nice North America LLC product is warranted against defects in material and workmanship for two (2) years. This warranty extends only to wholesale customers who buy direct from Nice North America LLC or through Nice North America LLC's normal distribution channels. Nice North America LLC does not warrant this product to consumers. Consumers should inquire from their selling dealer as to the nature of the dealer's warranty, if any.

There are no obligations or liabilities on the part of Nice North America LLC for consequential damages arising out of or in connection with use or performance of this product or other indirect damages, with respect to loss of property, revenue, or profit, or cost of removal, installation, or reinstallation. All implied warranties for functionality, are valid only until the warranty expires. This Nice North America LLC Warranty is in lieu of all other warranties expressed or implied.



Customer Service

760-438-7000
Monday – Friday, 5 a.m. – 4 p.m. PST
Saturday, 7 a.m. – 3:30 p.m. PST

www.2gig.com

Nice North America LLC

5919 Sea Otter Place, Suite 100
Carlsbad, CA 92010 USA

